



Albrecht DR315



Internet / DAB / FM Radio



User Manual

Important Safety Notes

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THIS PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE. TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 <p>The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of insulated 'dangerous voltage' within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>	<div style="border: 1px solid black; padding: 5px; background-color: #f0f0f0;"> CAUTION </div> <div style="border: 1px solid black; padding: 5px; background-color: #333; color: white; text-align: center;"> RISK OF ELECTRIC SHOCK DO NOT OPEN </div> <p>WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) , NO USER SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIEDSERVICE PERSONNEL.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.</p>
---	--	---

- 1.) Read these instructions.
- 2.) Keep these instructions.
- 3.) Heed all warnings.
- 4.) Follow all instructions.
- 5.) Do not use this apparatus near water.
- 6.) Clean only with dry cloth.
- 7.) Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- 8.) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9.) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 10.) Only use attachments / accessories specified by the manufacturer.
- 11.) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 12.) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 13.) This appliance shall not be exposed to dripping or splashing water and no object filled with liquids such as vases shall be placed on the apparatus.
- 14.) Do not overload wall outlet. Use only power source as indicated.
- 15.) Use replacement parts as specified by the manufacturer.
- 16.) The product may be mounted to a wall only if recommended by the manufacturer.
- 17.) Upon completion of any service or repairs to this product, ask the service technician to perform safety checks.

Welcome

Thank you for purchasing BlueTinum® BT-H1506. Your DR 315 is designed to provide you with hours of music enjoyment with simple, convenient access to thousands of Internet radio stations worldwide and furthermore with DAB/FM and music streaming options. No matter whether you are in Alaska and wants to listen to Hawaiian music, or whether you want to listen to classical music, hard rock or jazz the DR 315 brings you home the radio station of your choice.

Table of content

1. Content of package.....	Page 4
2. Before you start.....	Page 4
3. Overview of BT-H1506.....	Page 4
3.1 Front panel.....	Page 4
3.2 Back panel.....	Page 5
4. Turning on BT-H1506.....	Page 6
5. General menu navigation.....	Page 6
6. Setting up the DR 315(Quick Guide).....	Page 7
6.1 Wizard.....	Page 7
6.2 Manual Config.....	Page 8
6.3 View Settings.....	Page 8
6.4 Using the BT-H1506.....	Page 9
7. Setting the time and date.....	Page 9
7.1 To set the time manually.....	Page 9
7.2 Set clock.....	Page 9
7.3 Set date.....	Page 9
7.4 Auto update.....	Page 9
7.5 Set 12/24 Hour.....	Page 9
7.6 Set sleep.....	Page 10
7.7 Set alarms.....	Page 10
7.7.1 Modes.....	Page 10
7.7.2 Last Listened.....	Page 10
7.7.3 Volume.....	Page 10
7.7.4 Save.....	Page 10
8. Setting up the music player.....	Page 10
8.1 Enter the music player.....	Page 11
9. The Main Menu.....	Page 14
9.1 Internet Radio.....	Page 14
9.2 Music Player.....	Page 14
9.3 DAB.....	Page 14
9.4 FM.....	Page 14
10. System Setup (Step by step).....	Page 14
10.1 Wizard.....	Page 15
10.2 PC Settings.....	Page 15
10.3 View Settings.....	Page 15
10.3.1 Active dapter.....	Page 16
10.3.2 MAC Address.....	Page 16

10.3.3 DHCP.....	Page 16
10.3.4 PC Settings.....	Page 16
10.3.5 SSID.....	Page 16
10.4 IP Settings.....	Page 16
10.4.1 IP Address.....	Page 16
10.4.2 Subnet Mask.....	Page 16
10.4.3 Gateway Address.....	Page 16
10.4.4 Primary DNS.....	Page 16
10.4.5 Secondary DNS.....	Page 17
10.5 Manual Settings.....	Page 17
10.5.1 DHCP Enable.....	Page 17
10.5.2 DHCP Disable.....	Page 18
10.6 Time Setup.....	Page 20
10.7 Factory Reset.....	Page 20
10.8 Software Upgrade.....	Page 20
10.9 Info.....	Page 20
10.9.1 Adding favourites and stations.....	Page 20
11. Using Internet Radio.....	Page 21
12. Using DAB Radio.....	Page 23
13. Using FM Radio.....	Page 25
14. Presets.....	Page 25

1. Content of package

Please make sure that the following content are included in the package:

1. DR 315 Main unit
2. Power supply
3. User Manual



2. Before you start

Before you can use your internet radio, you need the following:

- A broadband internet connection.
- A wireless access point connected to your broadband internet. Via a router is recommended.
- If your wireless network is configured to use WEP (Wired Equivalent Privacy) or WPA (Wi-Fi Protected Access) data encryption, it is important that you know your WEP or WPA code to connect to your network.


Depending on your wireless router the internet radio should work anywhere within up to 20-30 meters of the wireless access point.

Before continuing, make sure that your wireless access point is turned on and connected to your broadband internet. Please refer to your wireless access point manual to get this part working.

3. Overview of your DR 315

After taking your DR 315 out of the package, please spend some time to familiarize yourself with its features.

3.1 Front Panel

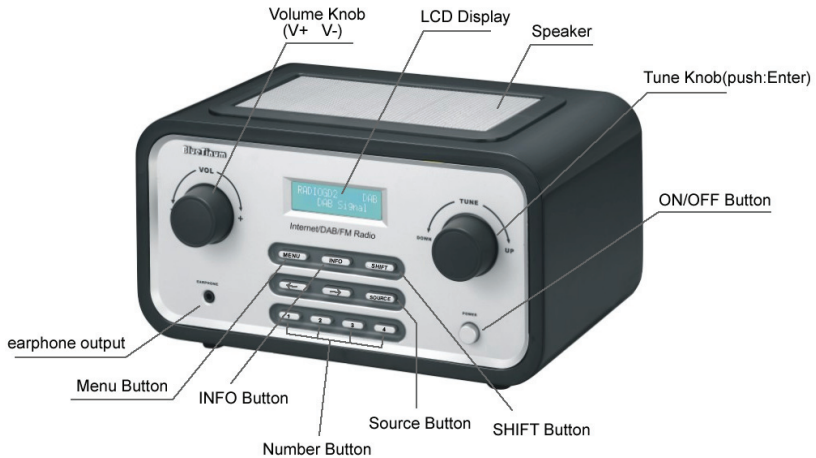

VOL = By Turning VOL knob Volume level is set. By Pressing VOL knob MUTE is activated/deactivated.

TUNE = By turning TUNE knob users can navigate through menus. By pressing TUNE knob user confirms choice.

MENU = By pressing MENU the CONTEXT Menu of the current mode is displayed.

INFO = Displays the different INFO in current mode.

SHIFT = By pressing SHIFT preset buttons will change from 1-4 to 5-8. F.ex. pressing shift and then long pressing PRESET 2 will save PRESET on preset 6.

← = Pressing ARROW left will navigate back in the menus.

→ = Pressing ARROW right will navigate forward in the menus.


SOURCE = By pressing SOURCE the DR 315 will change between the different modes: Internet Radio, Music Player, DAB & FM.

1 – 4 = Preset buttons for saving favourite stations (Internet Radio, DAB or FM)

POWER = Turns DR 315 on/off

EARPHONE = Earphone out

3.2 Back Panel

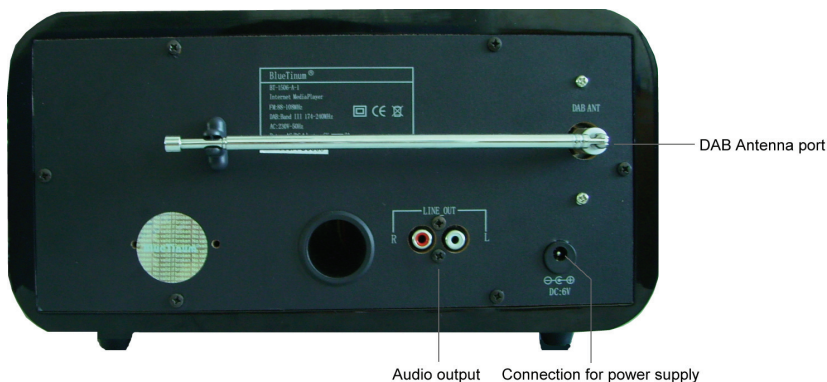

4. Turning on DR 315

Preparing DR 315 for operation:

1. Place DR 315 on a flat surface.
2. If you are accessing the internet via wired Ethernet LAN, place DR 315 near Ethernet LAN access and proceed to **6. Setting up the DR 315** (Wired access is optional and may not be available in your BT-H1506)
3. If you are accessing the internet via Wireless LAN, please proceed to **6. Setting up the BT-H1506**.

5. General menu navigation

To navigate to the different menus you must use the ARROW buttons on the front panel and the TUNE knob. This is general for all menu items. Use ARROW keys to find the menu you wish to select and turn the TUNE knob to navigate to the desired menu item. Then press TUNE knob to select. When menu item is selected pressing right ARROW key will also confirm selection.

F.ex. to navigate to the MAIN MENU while in INTERNET RADIO MODE press left ARROW button and the Menu is showing on display. Turn the TUNE knob until MAIN MENU is selected. Press TUNE knob to select MAIN MENU.

Pressing MENU on front panel will take you to the Context Menu of the present mode of DR 315 (Internet, DAB etc.)

DR 315 has numerous features which require a small degree of setup before users are able to fully use all the functionalities of the radio. The Main Menu → System Setup menu has a series of options that allow system-wide settings to be altered.

These settings are:

Setting	Action
Internet setup	Enter the Internet Settings submenu
Time setup	Enter the Time/Alarm setup submenu
Software upgrade	Enter the Software Upgrade wizard
Factory reset	Performs a factory reset

Please go to page 14 for System Menu (Step by Step).

6. Setting up the DR 315(Quick Guide)

The first time you want to connect to the internet to listen to radio stations, you will have to set up the connection. This is done with the Internet Wizard. The radio has been configured to automatically run the Internet Wizard when you enter the Internet Radio mode (If a connection has not already been made).


Alternatively you can manually run the Internet Wizard if you want to connect to a different WiFi network. This can be accessed from the System Setup → Internet Setup menu in the MAIN MENU.

The Internet Setup menu consists of 4 options:

Wizard, PC Settings, View Settings and Manual Settings.

6.1 Wizard:

1. Select the Wizard.
2. The Wizard will then automatically scan for available Wireless or Wired (Ethernet) networks and a list is displayed.
3. Turn the TUNE knob to either select desired network (SSID) or select one of the three other options. Rescan (Performs a rescan for networks), Wired (Optional) (Will select Ethernet) or Manual Config (Will allow user to manually configure the Wireless setup).
4. If the network has no security the following messages appears – “Please wait Connecting”, “Please wait Acquiring address” and “Connected” The Internet Radio menu will be displayed.
5. If the network has a security feature enabled the DR 315 will prompt you to enter the key or pass phrase. The security details must match the security information configured in the wireless access point. The authentication type (WEP, Open, WPA or WPA2) will automatically be detected.
6. Password Entry:
Turn the TUNE knob to display different sets of characters and numbers. Use the ARROW buttons to move the flashing cursor to select the desired characters.



When entering key or pass phrase:
The "<" symbol = Delete last character
The "↵" symbol = Enter
The "C" symbol = Cancel

6.2 Manual Config

More advanced users can also edit their WiFi settings by selecting the System Setup → Internet Setup → Manual Settings menu.

Selecting Manual Settings allows you to manually configure your network. First choose between Wired (Optional) or Wireless. Press TUNE knob to confirm. Then choose between DHCP enable or disable.

Choose enable if you want DHCP to automatically acquire an IP address. Choose Press TUNE knob to confirm. Enter SSID (Same procedure as explained above (6)). Turn TUNE knob to choose between authentication type (Open, WEP, WPA or WPA2). Press TUNE knob to confirm. Turn TUNE knob to choose between Open or PSK. Press TUNE knob to confirm. Enter security key or pass phrase as explained above (6). Display will show "Please wait Connecting", "Please wait Acquiring address" and "Connected" The Internet Radio menu will be displayed.

Choose disable if you want to manually enter IP address etc. Press TUNE knob to confirm. Enter IP address by turning the TUNE knob to desired number. Use ARROW buttons to choose next or previous number. Press TUNE knob to confirm. Enter Subnet mask. Press TUNE knob to confirm. Enter Gateway address. Press TUNE knob to confirm. Enter Primary DNS. Press TUNE knob to confirm. Enter Secondary DNS. Press TUNE knob to confirm. Enter SSID. Choose "↵" to confirm. Choose between Open, WEP, WPA or WPA2. Press TUNE knob to confirm. Choose between Open or PSK (For WEP), TKIP or AES (For WPA, WPA2). Press TUNE knob to confirm. Enter security key or pass phrase as explained above (6). Display will show "Please wait Connecting", "Please wait Acquiring address" and "Connected" The Internet Radio menu will be displayed.

6.3 View settings

Selecting View Settings allows you to view your settings. The menu items are:
Active Adapter (Display the current connection being used to connect to the internet (WLAN or Wired))

MAC Address (Displays the DR 315MAC Address)

SSID (Displays the current SSID)

DHCP (Displays the current DHCP setting)

PC Setting (Display User Name or Password)

IP Settings (Displays current IP Address, Subnet Mask, Gateway Address, Primary DNS or Secondary DNS)

6.4 Using the DR 315

On power up the DR 315 accesses the last mode or service selected. To access another mode:

1. Press Menu button on front panel to display Context menu of the mode you are in.
2. Turn the TUNE knob to select Main Menu. Press TUNE knob to confirm.
3. Turn TUNE knob to choose desired mode.

The DR 315 accesses the last service played in that mode.

7. Setting the time and date

The time and date must be set manually each time main power has been switched off (Alternatively you can tune into a DAB station and (if available) time and date can be extracted from the DAB stream).

7.1 To set the time manually:

Go to MAIN MENU → SYSTEM SETUP → TIME SETUP

Choose to either SET CLOCK, SET DATE, AUTO UPDATE, SET 12/24 Hour, SLEEP or ALARM

7.2 Set Clock:

Select Set Clock. Turn TUNE knob to set hour. Press right ARROW button to select minutes. Turn TUNE knob to set minutes. Use ARROW keys to choose between hours and minutes. Press TUNE knob to confirm settings.

7.3 Set Date:

Select Set Date. Turn TUNE knob to set year. Press right ARROW button to select month. Turn TUNE knob to set month. Press right ARROW button to select day. Turn TUNE knob to set day. Use ARROW keys to choose between year, month and day. Press TUNE knob to confirm settings.

7.4 Auto Update:

Select Auto update. Turn TUNE knob to choose between Update from DAB or No Update. When selected press TUNE knob to confirm setting. When Update from DAB is selected you can tune into a DAB station and (if available) time and date can be extracted from the DAB stream.

7.5 Set 12/24 Hour:

Select Set 12/24 Hour. Turn TUNE knob to choose between Set 12 Hour or Set 24 Hour. When selected press TUNE knob to confirm setting.

7.6 Set Sleep:

Select Sleep. Turn TUNE knob to choose between No Sleep, 15, 30, 45 or 60 minutes. Press TUNE knob to confirm. The DR 315 will turn off automatically after the desired amount of minutes.

7.7 Set Alarms:

Select Alarms. Turn TUNE knob to choose from Alarm 1 or 2. Press TUNE knob to confirm. Press TUNE knob to choose between Time, Off, Mode, Last listened, Volume and Save. Select Time by pressing TUNE knob. Turn TUNE knob to set Hour. Press right ARROW button to choose minutes. Turn TUNE knob to set minutes. Use ARROW keys to choose between hours and minutes. Press TUNE knob to confirm settings.

Other settings can be selected by turning TUNE knob and pressing TUNE knob to select.

7.7.1 Modes: Internet Radio, DAB, FM or Buzzer

7.7.2 Last Listened: Selecting Last Listened will also include all Presets to be chosen.

7.7.3 Volume: Turn TUNE knob to set ALARM volume.

7.7.4 Save: When all settings are as desired. Select SAVE and press TUNE knob to confirm. ALARM will activate even if DR 315 is playing. However if playing mode and alarm mode are the same there will only be a short break when alarm enters mode. When POWER button is turned off and ALARM is set display shows a Bell in upper right corner.

8. Setting up the music player:

In order to set up the DR 315 to playback music stored on shared network drives, user name, password and domain settings must be configured to work with the PC share settings.

PC: Domain/Workgroup configuration

The domain configuration item can be found on a Windows XP machine as follows:

1. From the start menu, select Control Panel → System. Select the Computer Name tab.
 2. The domain or workgroup that the computer is a member of is displayed in this tab.
 3. If the PC is not a member of any domain or Workgroup then one must be joined. To do so click on the change button on the computer name tab and enter the name of the domain (Default on Windows XP is MSHOME)
 4. A reboot of the PC may be required if the domain or workgroup has been changed.
1. PC: Setting up a new user account (If no user accounts already exists)
The DR 315 requires a user account to be set up on each PC that you wish to

browse. This username and password (Optional) needs to be the same on each PC as the DR 315 only stores one username and password.

PC: Configuring a shared drive

From the start menu select My Computer and navigate to the directory you wish to share. Right click on the directory and select Sharing and security. Configure the shared drive and make sure the user name has as minimum read access to the share.

DR-315: Storing the user name and password

Before the DR 315 can stream music from PC, you need to ensure that you have a shared folder available on the PC, and that user name and password (If one has been set) for the shared folder on the PC.


This can be set up using the PC Settings menu as shown below:




8.1 Enter the music player:


Go to MAIN MENU → Music Player

With Music Player selected turn TUNE knob to choose between (If available) workgroups. Press TUNE knob to confirm. Turn TUNE knob to choose between (If available) shared folders on the network. Press TUNE knob to confirm. Browse to the shared folder with music content. Press TUNE knob to confirm. Turn TUNE knob to choose between the shared music files. Press TUNE knob to play selected file.

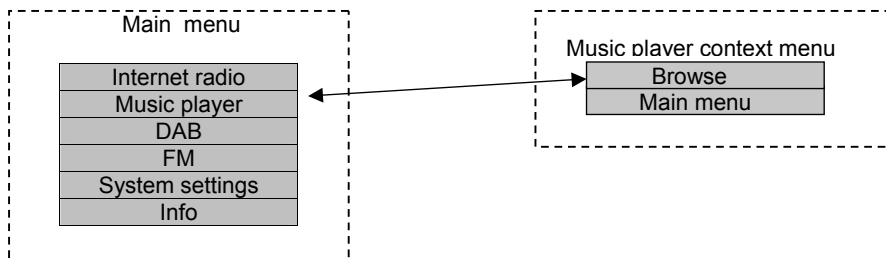


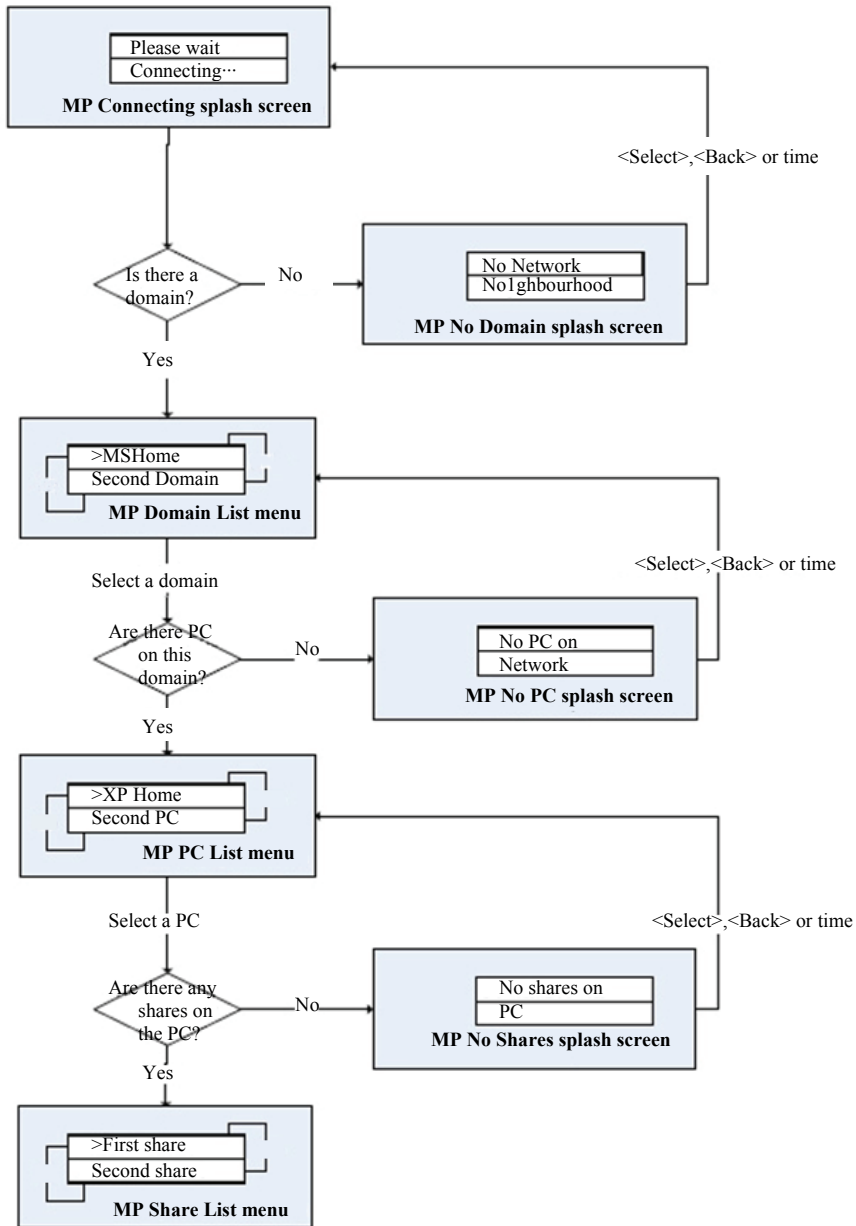


1. Ensure that the user name and password (If needed) are configured.
2. Enter the Music Player menu.
3. DR 315 searches for all available domains and shows all found domains.

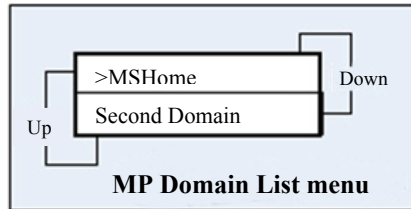

4. Once the user selects a domain, a list of PCs on the domain will be displayed:

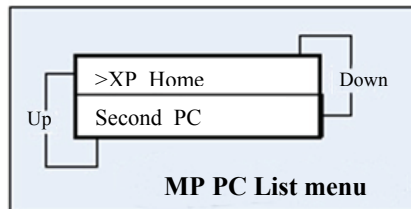

5. Once a domain and PC has been chosen, a list of all the shared folders in the system is displayed.
6. User can then select a folder and select a file to play within the folder.
7. Pressing MENU button on front panel will display the Music Player context menu, which allows the user to return to the main menu, or pressing browse will take the user into the last selected shared folder.

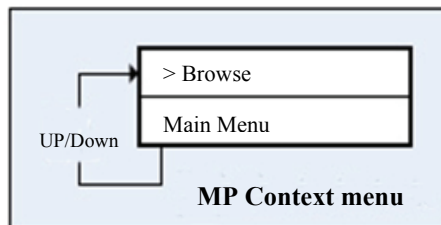

9. The MAIN menu

Use navigation key LEFT on remote to go back in the menu. Press several times until "MAIN MENU" is an option in the menu. Choose "MAIN MENU" by pressing "ENTER" on remote or "TUNE" knob on front panel. Display will show:

Internet radio Music player DAB FM System setup Info

9.1 Internet radio

Please refer to page 21 for instructions on how to use Internet radio.

9.2 Music player

Please refer to page 15 for instructions on how to use Music player.

9.3 DAB

Please refer to page 23 for instructions on how to use DAB.

9.4 FM

Please refer to page 25 for instructions on how to use FM.

10. System Setup (Step by step)

Go to the "MAIN MENU" using the navigations keys on remote or "|<<" button and "TUNE" knob on front panel. Choose "SYSTEM SETUP" Display will show:

Internet setup Time setup Factory reset Software upgrade

Choose "Internet setup". Display will show:

Wizard PC settings View settings Manual settings

10.1 Wizard

Please refer to our instructions on how to use the wizard.

10.2 PC settings

This setting is used to input user name and password if your PC requires this for sharing folders in "Music player"

Choose "PC setting". Display will show:

>User name Password

Choose "User name" to input user name.

Enter "User name" by using navigation keys on remote or turning "TUNE" knob on front panel.

Use navigation keys "UP/DOWN" on remote or turn "TUNE" knob to choose between numbers, letters, capital letters or special characters.

Enter user name using navigation keys on remote or >>| <<| buttons on front panel to choose correct number/letter and press "ENTER" on remote or "TUNE" knob on front panel to confirm.

When whole user name is entered correctly choose → to proceed. Choose "<" to clear and "C" to cancel.

Choose "Password" to input password.

Enter "Password" by using navigation keys on remote or turning "TUNE" knob on front panel.

Use navigation keys "UP/DOWN" on remote or turn "TUNE" knob to choose between numbers, letters, capital letters or special characters.

Enter password using navigation keys on remote or >>| <<| buttons on front panel to choose correct number/letter and press "ENTER" on remote or "TUNE" knob on front panel to confirm.

When whole password is entered correctly choose → to proceed. Choose "<" to clear and "C" to cancel.

10.3 View settings

This setting is used to view the current settings. Choose "VIEW SETTINGS". Display will show:

>Active adapter MAC address DHCP PC settings SSID IP settings
--

10.3.1 Active adapter

Choose this to view the active adapter (WLAN or WIRED).

10.3.2 MAC address

Choose this to view the MAC address of the DR 315.

10.3.3 DHCP

Choose this to view the DHCP setting. (Enabled or disabled).

10.3.4 PC settings

Choose this to view User name or Password set for Music player.

10.3.5 SSID

Choose this to view SSID.

10.4 IP settings

Choose this to view PC settings. Display will show:

>IP address
Subnet mask
Gateway address
Primary DNS
Secondary DNS

10.4.1 IP address

Choose this to view the IP address.

10.4.2 Subnet mask

Choose this to view the Subnet mask.

10.4.3 Gateway address

Choose this to view the Gateway address.

10.4.4 Primary DNS

Choose this to view Primary DNS.

10.4.5 Secondary DNS

Choose this to view Secondary DNS.

10.5 Manual settings

Choose this to manually setup your network. Display will show:

>Wired
Wireless

Note! Wired is an optional feature and may not be available for your BT-H1506.

Choose wireless. Display will show:

>DHCP enable
DHCP disable

Choose your desired setting.

10.5.1 DHCP enable

Display will show:

SSID
0123456789< → C

Enter "SSID" by using navigation keys on remote or turning "TUNE" knob on front panel. Use navigation keys "UP/DOWN" on remote or turn "TUNE" knob to choose between numbers, letters, capital letters or special characters.

Enter SSID using navigation keys on remote or >>| <<| buttons on front panel to choose correct number/letter and press "ENTER" on remote or "TUNE" knob on front panel to confirm.

When whole SSID is entered correctly choose → to proceed. Choose "<" to clear and "C" to cancel.

Display will show:

>Open
WEP
WPA
WPA2

Choose your Security. If Open is chosen (No security) radio will connect. However having No security is not recommended. If any other security (WEP, WPA, WPA2) is chosen, display will show:

If WEP is chosen:

>Open
PSK

If WPA is chosen:

>TKIP
AES

If WPA2 is chosen:

>TKIP
AES

Choose your desired setting. Display will show:

Key:
0123456789< → C

Enter "Key" by using navigation keys on remote or turning "TUNE" knob on front panel. Use navigation keys "UP/DOWN" on remote or turn "TUNE" knob to choose between numbers, letters, capital letters or special characters.

Enter key using navigation keys on remote or >>| <<| buttons on front panel to choose correct number/letter and press "ENTER" on remote or "TUNE" knob on front panel to confirm.

When whole key is entered correctly choose → to proceed. Choose "<" to clear and "C" to cancel.

Radio will connect.

10.5.2 DHCP disable

Display will show:

IP address
0.0.0.0

Enter desired IP address by using the navigation buttons on the remote or turn "TUNE" knob on front panel. Press "ENTER" or "LEFT" on remote or press "TUNE" knob to go to next number. When fully entered display will show:

Subnet mask
255.255.255.0

Enter desired Subnet mask by using the navigation buttons on the remote or turn "TUNE" knob on front panel. Press "ENTER" or "LEFT" on remote or press "TUNE" knob to go to next number. When fully entered display will show:

Gateway address
0.0.0.0

Enter desired Gateway address by using the navigation buttons on the remote or turn "TUNE" knob on front panel. Press "ENTER" or "LEFT" on remote or press "TUNE" knob to go to next number. When fully entered display will show:

Primary DNS
0.0.0.0

Enter desired Primary DNS by using the navigation buttons on the remote or turn "TUNE" knob on front panel. Press "ENTER" or "LEFT" on remote or press "TUNE" knob to go to next number. When fully entered display will show:

Secondary DNS
0.0.0.0

Enter desired Secondary DNS by using the navigation buttons on the remote or turn "TUNE" knob on front panel. Press "ENTER" or "LEFT" on remote or press "TUNE" knob to go to next number. When fully entered display will show:

SSID
0123456789< → C

Enter "SSID" by using navigation keys on remote or turning "TUNE" knob on front panel. Use navigation keys "UP/DOWN" on remote or turn "TUNE" knob to choose between numbers, letters, capital letters or special characters.

Enter SSID using navigation keys on remote or >>| <<| buttons on front panel to choose correct number/letter and press "ENTER" on remote or "TUNE" knob on front panel to confirm.

When whole SSID is entered correctly choose → to proceed. Choose "<" to clear and "C" to cancel.

Display will show:

>Open
WEP
WPA
WPA2

Choose your Security. If Open is chosen (No security) radio will connect. However having No security is not recommended. If any other security (WEP, WPA, WPA2) is chosen, display will show:

If WEP is chosen:

>Open
PSK

If WPA is chosen:

>TKIP
AES

If WPA2 is chosen:

>TKIP
AES

Choose your desired setting. Display will show:

Key:
0123456789< → C

Enter "Key" by using navigation keys on remote or turning "TUNE" knob on front panel. Use navigation keys "UP/DOWN" on remote or turn "TUNE" knob to choose between numbers, letters, capital letters or special characters.

Enter key using navigation keys on remote or >>| <<| buttons on front panel to choose correct number/letter and press "ENTER" on remote or "TUNE" knob on front panel to confirm.

When whole key is entered correctly choose → to proceed. Choose "<" to clear and "C" to cancel.

Radio will connect.

10.6 Time Setup

Please go to page ?? **7. Setting the time and date**

10.7 Factory Reset

Go to "MAIN MENU"

Use navigation key LEFT on remote to go back in the menu. Press several times until "MAIN MENU" is an option in the menu. Choose "MAIN MENU" by pressing "ENTER" on remote or "TUNE" knob on front panel. From the main menu choose "System setup" From system setup choose "Factory reset" Display will show:

Press 'INFO' to
confirm reset

Press "SETUP/INFO" on remote to confirm reset. By doing this the radio will restart with the factory settings. This also means that all connections has to be configured again. A factory reset may be necessary if the radio is not functioning correctly or menu/display is acting up.

10.8 Software upgrade

Used for upgrading software from factory server

10.9 Info

Choose "Info". Display will show:

>SW version
Radio ID

Choose "SW version" to see the software version.

Choose "Radio ID" to see the unique ID of your radio. This can be used to create an account on <http://www.wifiradio-frontier.com/>

10.9.1 Adding favourites and stations


Choose "Radio ID" to see the unique ID of your radio. This can be used to create an account on <http://www.wifiradio-frontier.com/>

When you have created an account you can now add favourites directly to your radio. You can also add your own stations if needed. You can also listen to all the radio stations from here on your PC.

11. Using Internet Radio

The Internet Radio mode allows the user to select services (Live radio stations or Podcasts) to listen to from the VTuner portal.

When the user connects to Internet Radio, a station list is provided. This is built up after the initial logon from the VTuner server. The actual menu items within the Station list menu will not change and it is sent back directly from the VTuner portal; We do not alter the data. The Station list menu and the two submenus that lead off (for items relating to Internet Radio and Podcasts, respectively) are shown below.




The Internet Radio Stations list menu provides the following functions:


Name	Description
My favourites	Create an account on http://www.wifiradio-frontier.com/ When you have created an account you can now add favourites directly to your radio. You can also add your own stations if needed. You can also listen to all the radio stations from here on your PC.
Stations	Navigates to sub-menu which allows user to navigate to stations by location, genre, most popular, new stations, or by doing a search by alphabets.
Podcast	Navigate to sub-menu which allows users to navigate to podcast and listen-again services by location, genre, or by doing a search by alphabets. On to off
My Added stations	Create an account on http://www.wifiradio-frontier.com/ When you have created an account you can now add favourites directly to your radio. You can also add your own stations if needed. You can also listen to all the radio stations from here on your PC.

The Internet Radio playing screen displays information on the currently selected service, and is the default behaviour when a service is selected and playing. The top line always displays a Station name, whilst the information displayed in the bottom line can be scrolled through by pressing the INFO button on the front panel. The different info displayed are shown below.

Radio services

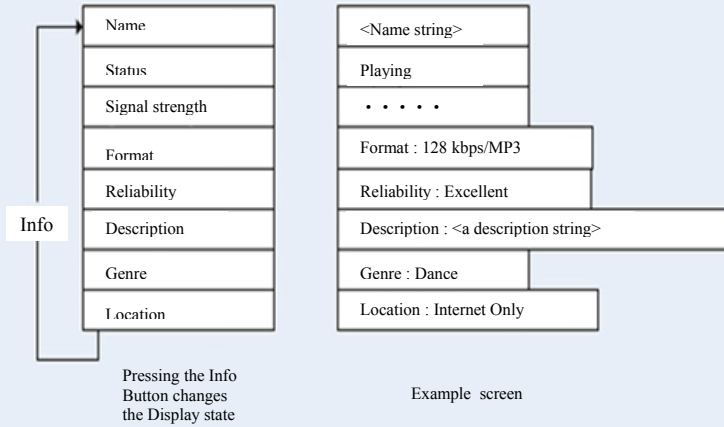


Podcast services

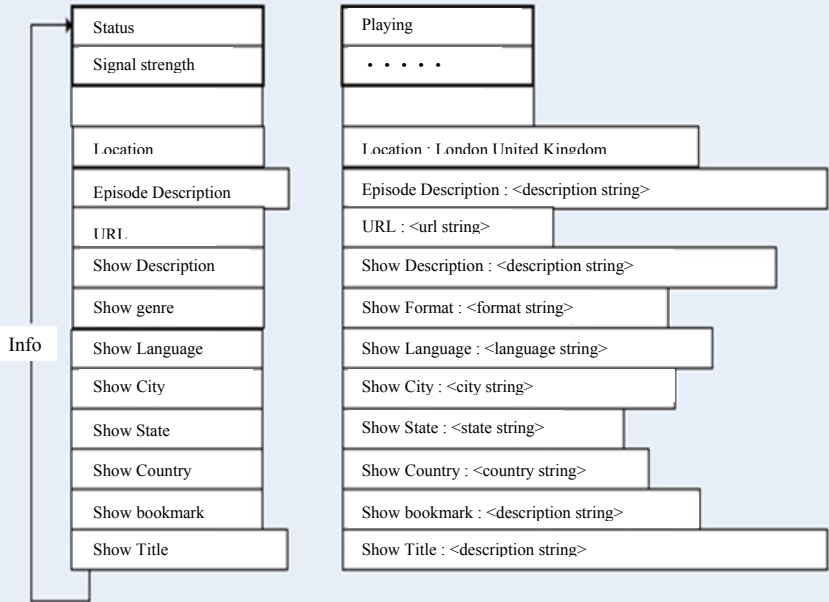

Internet Radio Playing screen


12. Using DAB Radio

The first time DAB mode is selected a Scanning of available stations is performed. Turn TUNE knob to choose a DAB station. Press TUNE knob to confirm.

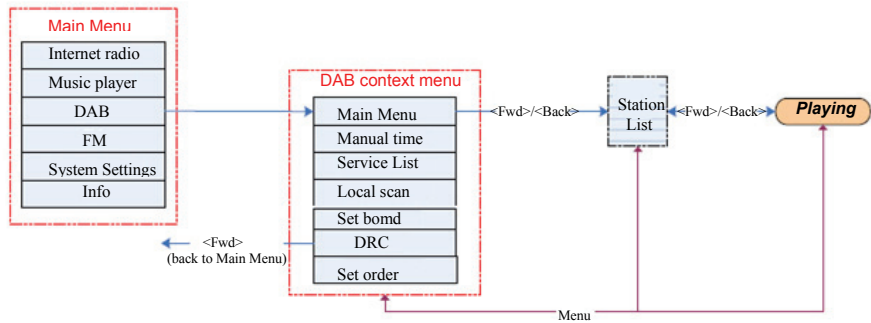


The DAB context menu provides the following functionalities:

Name	Description
Service list	Shows a list of all available DAB stations.
Local scan	Performs a scan of the local DAB ensemble range(for example, a product designed for the UK will scan ensemble 11B to 12D).
Full scan	Performs a scan of the whole DAB ensemble range
Manual tune	list of frequencies displayed is dependant on the currently-set frequency band and contains all of the frequencies within that band. It starts with the short name of the frequency. for example 12B, and is followed by the actual frequency in MHZ
DRC	Allows users to set the Dynamic Range Control for the DAB audio decoder.
Station order	Allows the station list to be sorted in alphanumeric order, by ensemble, or by validity (station which are off-air will be moved to the end of the list).

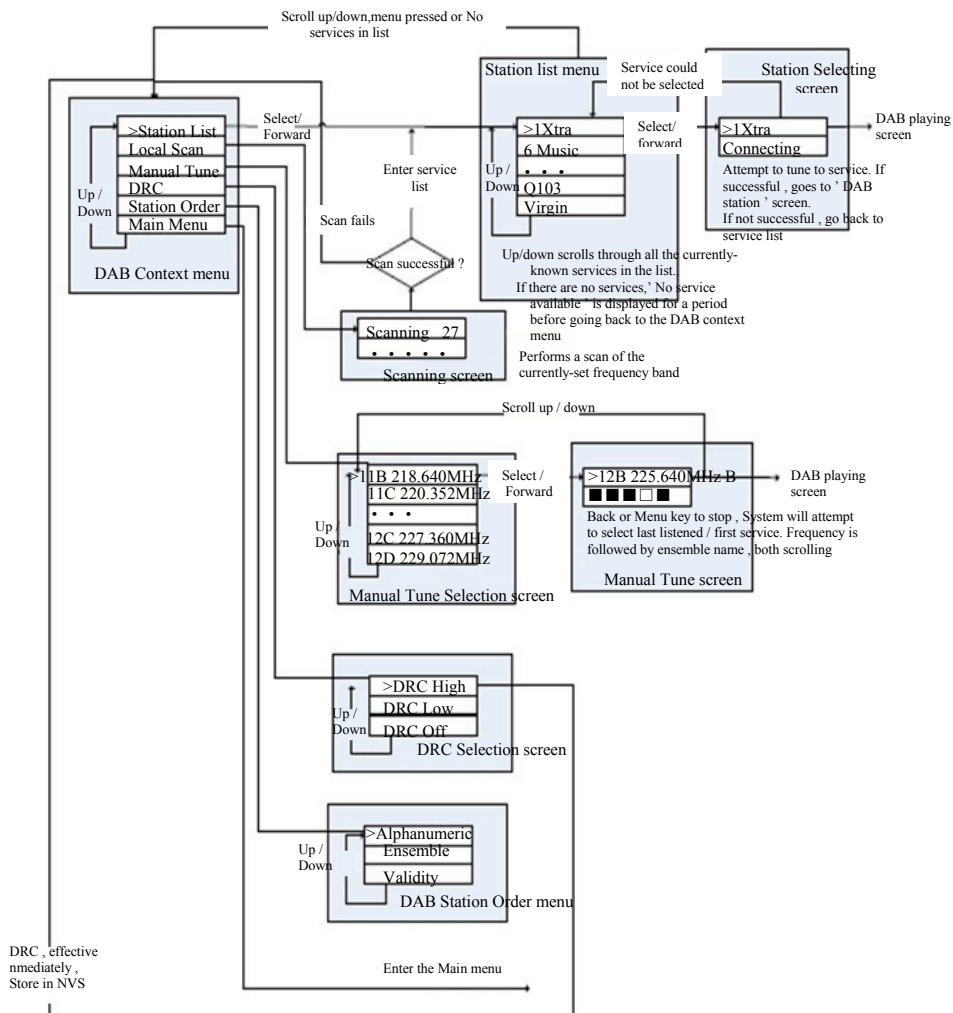

13. Using FM Radio

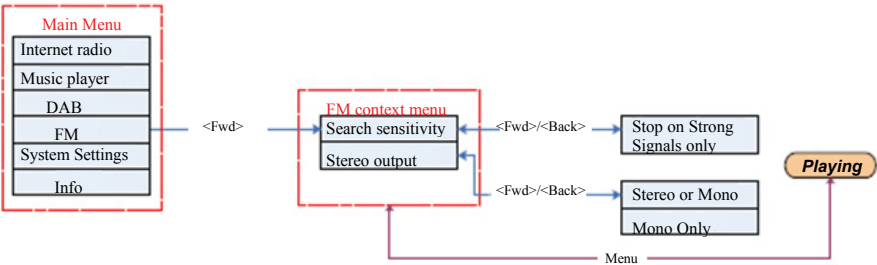

The FM context menu allows you to set up the following:

Name	Description
Scan setting	<p>The Scan settings menu allows the user to set how an FM search (started by a long-hold press of the Up/Down keys in the FM Playing screen) behaves.</p> <p>Stop on strong signals only' will only stop under strong signal strengths if other objectives are also meant. This means that the audio quality of services that it stops on should be good, there is also the chance that desired services may be missed.</p> <p>Stop on all signals' will stop under many more circumstances, including Carrier Wave and other non-broadcast interference. Whilst this means that there will be more stops, it reduces the chances of missing a desired service.</p>
Audio setting	<p>The Audio setting menu allows the user to set whether to always play stereo stations in mono mode, or whether to switch stereo stations to mono when the signal quality gets below a certain threshold</p>

To search for a stations press TUNE knob to automatically search for a station. Turn TUNE knob to manually set frequency.

14. Presets:

Presets are a system that allows the user to store a number of preset stations in each mode. The behaviour of presets is different in each mode because of the way that the preset is stored within the system.

Presets are available in the following modes:

- Internet Radio
- DAB
- FM

A short press of a preset button is used to recall a preset. A long press of a preset button is used to store a preset.

When listening to a radio station (Internet/DAB/FM) Press and hold numeric key 1-4 to store a station to preset. When station is playing press and hold will show PRESET STORED and the current station will be stored.(stored1-4)

Playing a preset station (1-4)

Press the numeric key with a station already preset. The preset station will play.

Pressing SHIFT and numeric key 1-4 same time to store a station to preset, when station is playing press and hold will show PRESET STORED and the current station will be stored) (stored 4-8)

Playing a preset station (4-8)

Press SHIFT and numeric key 1-4 same time with a station already preset. The preset station will play

Legal publications:

This radio is intended for sales in Germany. Please find our publications (as far as requested by European laws) about warranty, CE declaration and recycling matters on the last page of our German user manual.

© 2007 Alan Electronics GmbH - Daimlerstr.1 k – D- 63303 Dreieich

www.albrecht-online.de - www.alan-electronics.de

Service Download: www.hobbyradio.de

service@alan-electronics.de

Spare parts and repair inquiries: +49 6103 9481 22

Fax: +49 6103 9481 60